


1/2" WIDE FULL DEPTH EXPANSION JOINT

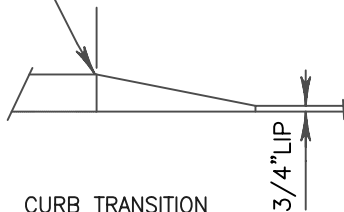


*WING DIMENSIONS MAY REQUIRE MODIFICATION TO MEET ADA STANDARDS

NOTE:

1. ALL COMMERCIAL/INDUSTRIAL DRIVEWAYS SHALL HAVE AN EXPANSION JOINT LOCATED MID-WIDTH.
2. SEE CHAPTER 3, ENGINEERING DEVELOPMENT GUIDE.
3. MATERIAL - WSDOT CONCRETE CLASS 4000psi.
4. FULL DEPTH EXPANSION JOINT SHALL BE INSTALLED IF DRIVEWAY WIDTH IS 10' OR GREATER.
5. CURB SHALL BE IN COMPLIANCE WITH STND DWG 312.
6. NO REBAR SHALL BE PLACED IN CURB, GUTTER, DRIVEWAY, OR SIDEWALK.



Public Works
Planning
and
Development
Services

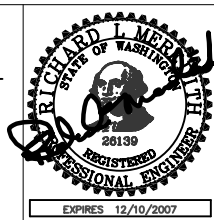

Curb & Gutter Section Driveway Approach

301

NOT TO SCALE

Revision Date
December 2006