


NOTES:

1. 5/16" X 3 1/4" GALVANIZED OR PLATED LAG SCREW & 3/8" ID X 1" OD NYLON WASHER.
2. INSTALL 30D GALV COMMON SPIKE ON THE FACE SIDE OF POST EXCEPT WHEN CONCRETE PAVING EXISTS. SPIKE SHALL BE 8" ABOVE BOTTOM OF POST AND SHALL PROTRUDE 2" FROM POST.
3. CONTACT SHORELINE PUBLIC WORKS (546-1700) FOR DETAILS REGARDING SIGN MESSAGE AND FOUNDATION.

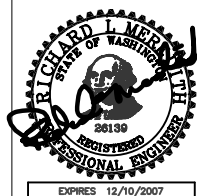

Public Works
Planning
and
Development
Services



Traffic Sign & Wood Post Installation

508

NOT TO SCALE

Revision Date
December 2006