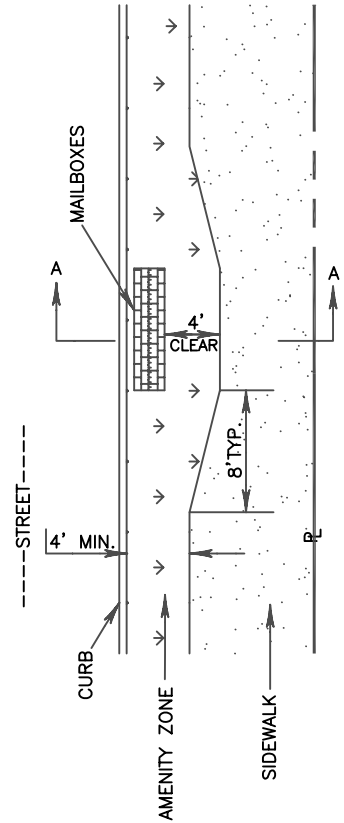

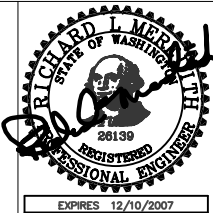


NOTE:  
OBTAIN LOCATION APPROVAL FROM LOCAL POSTMASTER.



**NOTE:**

1. INSTALL 30D GALV COMMON SPIKE ON THE FACE SIDE OF POST EXCEPT WHEN CONCRETE PAVING EXISTS. SPIKE SHALL BE 8" ABOVE BOTTOM OF POST AND SHALL PROTRUDE 2" FROM POST

	<p>Public Works Planning and Development Services</p>		<b>Mailbox Stand</b>	<b>514</b>
				<p>NOT TO SCALE</p>
				<p>Revision Date December 2006</p>